

**Why is the SPS dropping water?**

Clean the water tanks and then cover the scale. Manually activate the valve with the problem, then add some air pressure. The idea is to get out the particles that are inside the valve.

*Author: Datacolor*

*Saved From: <http://knowledgebase.datacolor.com/article-539.html>*