



DYMO LABELWRITER PRINTER SETUP

Note: Please install the Dymo printer software first! Then proceed with the following:

1. Go to the Control Panel and highlight the Dymo printer icon
2. Right-click on the printer icon
3. Click on PROPERTIES
4. Under the 'GENERAL' tab – Click on PRINTING PREFERENCES
5. Under the 'LAYOUT' tab – Change 'ORIENTATION' to Landscape, do NOT press OK
6. Click on 'ADVANCED BUTTON'(lower right corner of layout, not tab) – Change 'PAPER SIZE' to 30256 SHIPPING
7. Click OK- Click Apply – Click OK.
8. Under the 'ADVANCED TAB' – Select 'PRINTING DEFAULTS'
9. REPEAT Steps 5 thru 7 (this time you are setting defaults, not preferences)
10. Select the 'DEVICE SETTINGS' tab (if applicable)
11. Change form to 30256 SHIPPING (not necessary with 400, but is with 330)
12. CLICK APPLY-CLICK OK.
13. In Control Panel, open the Printers and Faxes folder and set the Dymo as the default printer.
14. PRINTER IS NOW SETUP FOR Datacolor Paint or Paintmaker labels.

DYMO LABELWRITER PRINTER SETUP using Datacolor Paint or Paintmaker

Note: Please follow the 'DYMO LABELWRITER PRINTER SETUP' first!

1. Run Datacolor Paint, or Paintmaker
2. Select 'OPTIONS' tab.
3. Select 'PRINTER SETUP' – Dymo icon will appear here!
4. The following info should appear;

YOUR CURRENT POS PRINTER: DYMO LABELWRITER (If it doesn't appear, click select printer button and select the Dymo) *****

YOUR CURRENT PRINTER SIZE: "SHIPPING LABEL" (or select it from the drop down menu)

YOUR CURRENT REPORT: 2.25"x 4" 30256 SHIPPING

Note: A visual sample of the label will appear. Click on the label. A 'GREEN' check will appear on the label. **CLICK APPLY – CLICK OK.**