

My buttons and features are missing from the Datacolor Paint or Paintmaker software.

Select the Paintmaker configuration utility from the Options menu. Select Use Current Manufacturer's default settings. Click *Apply* and then *OK*, both located on the bottom right hand corner of the screen. Exit and restart the software, to see the new settings.

Author: Datacolor

Saved From: <http://knowledgebase.datacolor.com/article-146.html>