

**How to change Tolerance Limit?**

Go to System → Tolerance → Go to Edit (For Pass/Fail) → Select existing equation → go to Edit Evaluation → change the tolerance limit and click OK. Again, click OK to save changes.

*Author: Datacolor*

*Saved From: <http://knowledgebase.datacolor.com/article-20.html>*