

Floating-point : invalid.

One of the causes can be that of components assigned to the extender in a particular colorant file. Remove the components of your extender, and then edit your extender (in Materials) to fix the density and cost values.

Author: Datacolor

Saved From: <http://knowledgebase.datacolor.com/article-39.html>