

**How to change the Standard- or Batchname, if the description is not correct.**

Provided that the measurement was not stored in the database, modify the standard name and afterwards choose in the main menu Std. - Desktop - update current desktop standard  
Provided that the measurement was not stored in the database, modify the standard name and afterwards choose in the main menu Std. -> Desktop -> Update Current Desktop Standard  
Provided that the measurement was not stored in the database, modify the standard name and afterwards choose in the main menu Std. -> Desktop -> The same approach is valid for the Batch, after renaming you choose from the main menu Bat - Desktop - Update Current Desktop Batch

*Author: Datacolor*

*Saved From: <http://knowledgebase.datacolor.com/article-503.html>*