

**How to change color tolerances?**

In Datacolor Tools two menu options offer you access to the tolerancing options.

The Standard Menu gives you the ability to assign a tolerance to an individual standard, and offers you the options to create, edit, and delete local tolerances only.

The System Menu provides options to create, edit and delete Shared (Global) Tolerances, and to select one of the Shared (Global) Tolerances as the default System Tolerance.

For more information read the attached document

*Author: Datacolor*

*Saved From: <http://knowledgebase.datacolor.com/article-9.html>*